

CLEANTYPE® MEDICAL

KSI-U10050 (WHITE)
KSI-U20050 (BLACK)



SPECIAL FEATURES

- IP68 rated medical keyboard
- Nano Silver additive with antimicrobial properties
- Adjustable brightness of backlight
- Fully washable and disinfectable
- 106 keys incl. num pad
- Waterproof silicone USB protection cap
- Excellent tactile feeling
- ON/OFF switch for keyboard power
- EN60601-1-2 certified

SPECIFICATION

Number of keys: 106 (US-Layout)
 Keyswitch technology: membrane
 Switching cycles: approx. 2 mill. (per key)
 Protection level: IP68
 Housing material: silicone
 Housing colour: white & black
 Backlight: blue colour, adjustable brightness

Interfaces: USB
 Cable length: 2 meter
 Operating temperature: 0°C~ +55°C
 Storage temperature: -30°C~+70°C
 Dimensions: 380(L) x 130(W) x 13(T) mm
 Weight: approx. 927 g
 Certification: EN60601-1-1-2, CE, FCC, RoHs
 Warranty: 1 year

ORDER INFORMATION

Cat. No.	Product description	Colour	Layout
KSI-U10050	CleanType® Medical	White	US
KSI-U10050-DE	CleanType® Medical	White	German
KSI-U10050-AR	CleanType® Medical	White	Arabic
KSI-U10050-JP	CleanType® Medical	White	Japanese
KSI-U10050-TH	CleanType® Medical	White	Thai

Other layouts, configurations and interfaces on request.

SUPPLEMENT PRODUCTS

Cat. No.	Product description	Colour
MSI-U10030	WATERPROOF MEDICAL TOUCH SCROLL MOUSE	White
MSI-U20030	WATERPROOF MEDICAL TOUCH SCROLL MOUSE	Black

* EN60601-1-2 CERTIFIED

IEC 60601-1-2 applies to the basic safety and essential performance of Medical Equipment (ME) equipment and ME systems in the presence of electromagnetic disturbances and to electromagnetic disturbances emitted by ME equipment and ME systems.


SHORT OPERATING INSTRUCTIONS



Turn the keyboard on and off by pressing both keys (duration 5 sec).



Turn the backlight on and off with this button.

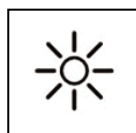

Adjust the brightness level (down / up) with these button.

CLEANING INSTRUCTION

For further details please refer to below link:

<http://www.gett-group.com/content/service-cleaning-instructions>